



FROMENTAL



Nonsuch
Chinoiserie

FROMENTAL



Nonsuch in Platinum

Creating your Chinoiserie Room

We aim to make the process of creating your own Chinoiserie Room a simple and enjoyable experience.
Our team will guide you through each step of the journey.

The process begins by making two key selections: **Design Layout** and **Colourway**.

Design Layout

We have several standard layouts within our Chinoiserie Collection. Varying in both style and density, each of these layouts can be further tailored to suit your space.



Select Design Layout



Supply Drawings & Measurements
to our Team



Miniature Design Layout for Approval



Colourway

Hand-painted and hand-embroidered onto a variety of silk grounds, we have a wide range of standard colourways. These can be seen in our 'families' guides. Alternatively, you can create your own colourway using our custom service.



Select Standard Colourway



Custom Colourway Service
Select Background
& Supply Colour Brief



Add Embroidery
if required



Sample for Approval



Order Confirmed and Painting Begins

For more detailed information on how to order please speak to a member of our team.



Nonsuch C001

Fromental wallcoverings are hand-made to order, tailored for each room. From supplied elevations and floor plan, we will place the design and panel seaming to ensure optimal installation.

Technical information

Design

In order for the design to be tailored to your room, our technical team will draw elevations and formulate a panel plan (see measuring process). Our design team will then create a black and white miniature within these elevations. We will tailor the design to fit the space, taking care to avoid placing birds and butterflies within wall corners or on panel seams.

Measuring Process

A set of 2D technical drawings (including elevations and floorplan) are preferable. Alternatively we will require the following information:

- Accurate and detailed dimensions of the area specified for wallcovering.
- All openings including doors, windows and any reveals if applicable.
- Individual wall sizes – it is important that the wall corners are specified.
- Measurements and location of any key items of furniture (this will allow us to tailor the layout further and ensure no key design features are obscured)

Tolerance

Standard tolerance on panel height is around 300mm/12", this will be split between the top and bottom of the panel.

We will also provide tolerance on the wall width, this will be determined by the panel plan and wall dimensions.

For any jib door/ framed panels tolerance will be supplied on all sides.
All tolerance values will be shown on the miniature.


Quantity

Quantity is calculated by combining the total square meterage/yardage with our standard panel tolerance.

Height - Standard panel height is between 1600mm/63" and 4300mm/169". Taller panels are available but may carry a surcharge.

Width - Standard panel width 915mm/36" plus 15mm/½" trim.

COVER IMAGE Nonsuch in Embroidered Moghul
LEFT-HAND IMAGE Close-up of Nonsuch in Boheme

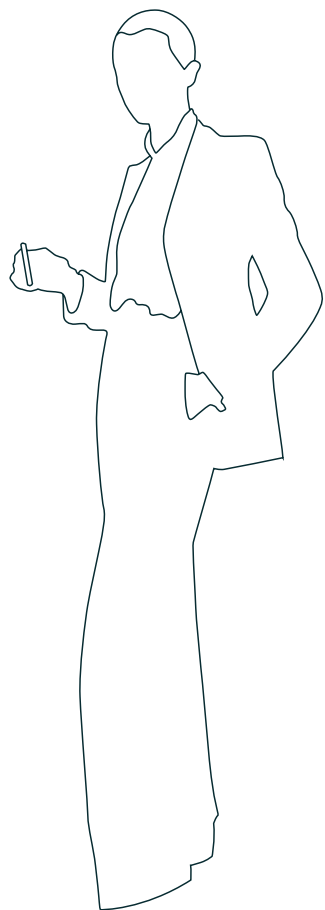

Nonsuch has many elements drawn from historic papers. Highly decorous and with a variety of flora this pattern fills the walls with beauty and detail.

